



Controlmicro

Adaptateur pour la boîte d'encastrement du Merten Touch Panel 7 / Adapter for the flush-mounted box of the Merten Touch Panel 7

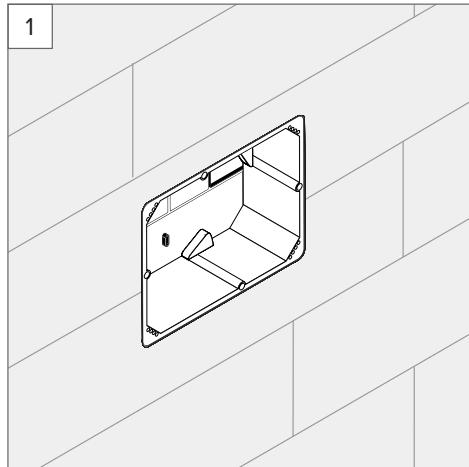


Coupez l'alimentation électrique et retirez votre Merten Touch Panel 7 du boîtier.

Switch off the power supply and remove your Merten Touch Panel 7 from the flush-mounted box.

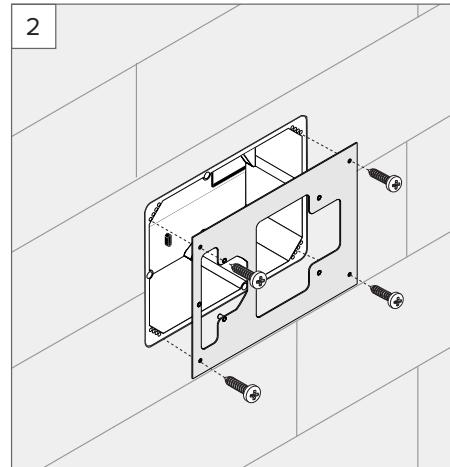


Fixez la plaque d'adaptation Merten Touch Panel 7 à la boîte d'encastrement avec les vis de montage Merten correspondantes.

Fasten the Merten Touch Panel 7 adapter plate to the flush-mounted box using the associated Merten mounting screws.

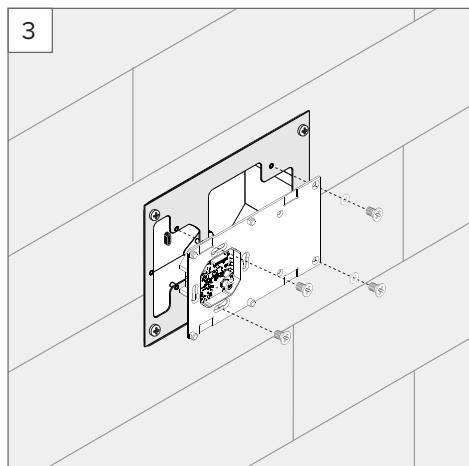

Fixez les fils de câble 24 V provenant du bloc d'alimentation aux bornes à vis (GND, 24 V) de la plaque de montage Controlmicro. Raccordez le câble KNX et le câble réseau. Fixez la plaque de montage du Controlmicro sur l'adaptateur à l'aide des vis fournies.

Plug the 24 V cable wires coming from the power supply unit into the screw terminals (GND, 24 V) of the Controlmicro mounting plate. Connect the KNX and the network cable. Attach the Controlmicro mounting plate to the adapter using the screws provided.

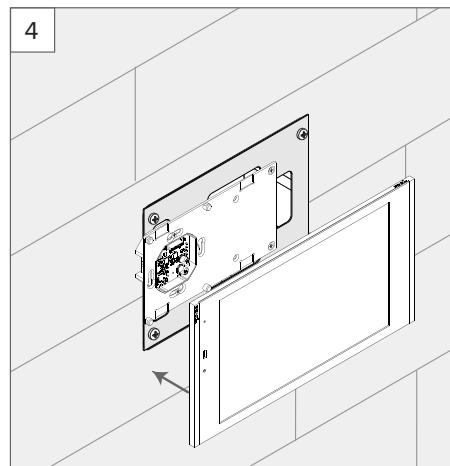

Insérez le panneau sur la plaque de montage et, si nécessaire, fixez les vis sans tête pour empêcher le vol.

Insert the panel into the mounting plate and, if necessary, fasten the grub screws to prevent theft.

PEAK 

PEAKnx GmbH
Otto-Röhm-Straße 69
64293 Darmstadt

www.peaknx.com
info@peaknx.com