


# Controlmicro


## Adaptateur pour la boîte d'encastrement du MT701 / ITT / Adapter for the flush-mounted box of the MT701 / ITT

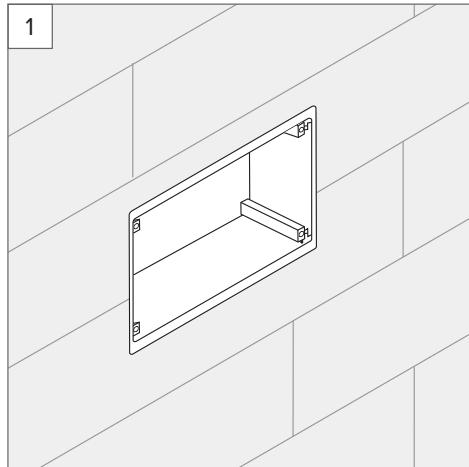

1

Coupez l'alimentation électrique et retirez votre MT701 du boîtier.


*Switch off the power supply and remove your MT701 from the flush-mounted box.*

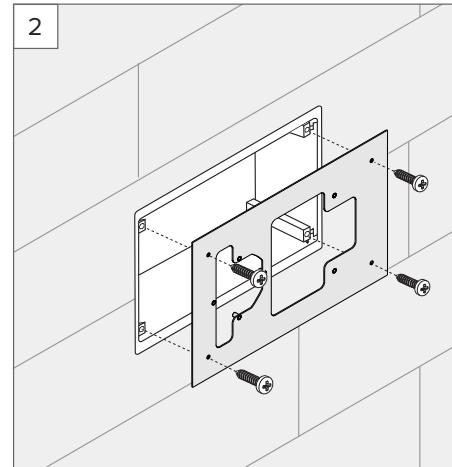

2

Fixez la plaque d'adaptation MT701 à la boîte d'encastrement avec les vis de montage ABB/Gira/Berker correspondantes.


*Fasten the MT701 adapter plate to the flush-mounted box using the associated ABB/Gira/Berker mounting screws.*

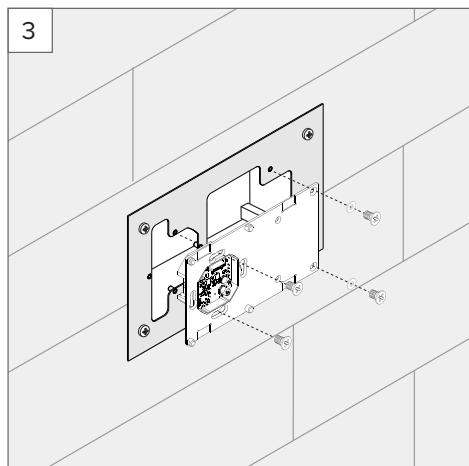

3

Fixez les fils de câble 24 V provenant du bloc d'alimentation aux bornes à vis (GND, 24 V) de la plaque de montage Controlmicro. Raccordez le câble KNX et le câble réseau. Fixez la plaque de montage du Controlmicro sur l'adaptateur à l'aide des vis fournies.

*Plug the 24 V cable wires coming from the power supply unit into the screw terminals (GND, 24 V) of the Controlmicro mounting plate. Connect the KNX and the network cable. Attach the Controlmicro mounting plate to the adapter using the screws provided.*

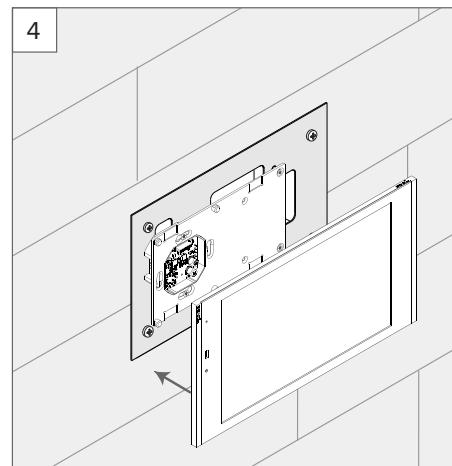

4

Insérez le panneau sur la plaque de montage et, si nécessaire, fixez les vis sans tête pour empêcher le vol.

*Insert the panel into the mounting plate and, if necessary, fasten the grub screws to prevent theft.*

**PEAK**

PEAKnx GmbH  
Otto-Röhm-Straße 69  
64293 Darmstadt

[www.peaknx.com](http://www.peaknx.com)  
[info@peaknx.com](mailto:info@peaknx.com)